



Dell Axim X51 (Windows Mobile 5) Bluetooth Connection Instructions


The first time you acquaint an ENERAC analyzer with your PocketPC you must perform the following steps:

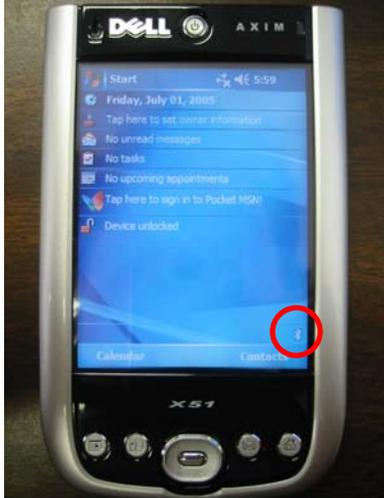


Tap the Bluetooth icon to open the Bluetooth Settings screen.

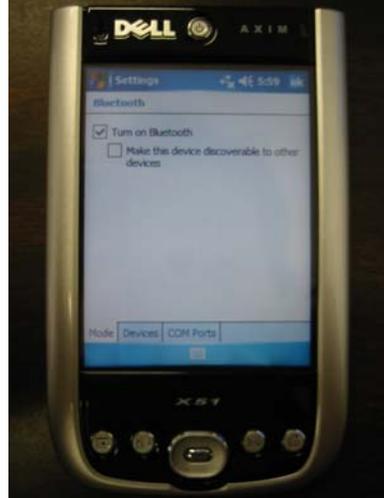


On the Mode tab, make sure Bluetooth is ON.

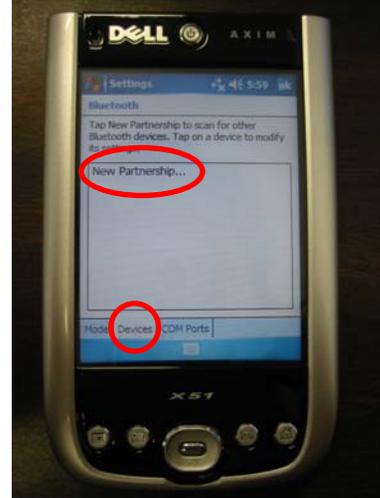

On the Device tab, tap New Partnership.

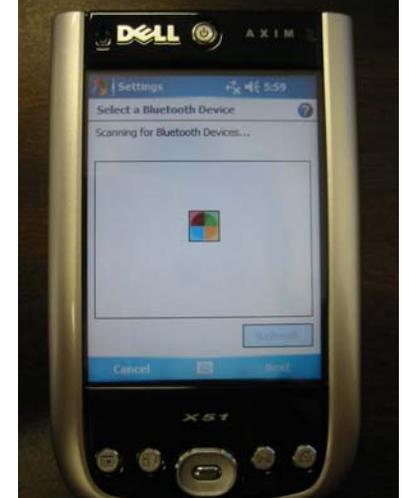


Your device will detect any Bluetooth devices nearby.

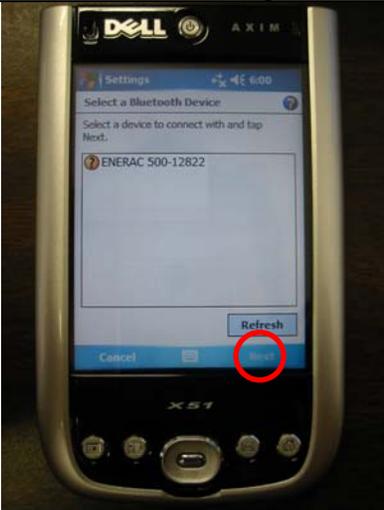


Select the ENERAC you wish to communicate with. The analyzer must be turned on to appear!




Tap Next. You will be prompted to add a Bluetooth device. Tap Yes. Enter any number for the Passkey and then Next.

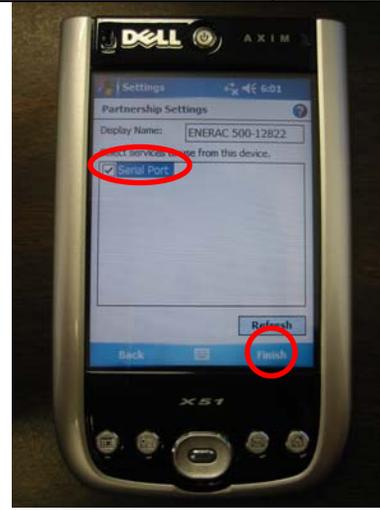


Select Serial Port and Tap Finish.

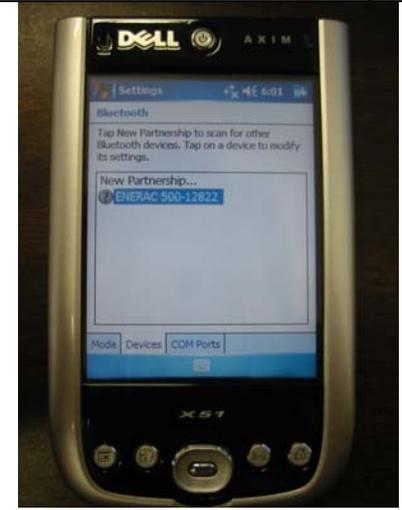


An entry for this ENERAC will now appear on the Devices tab.

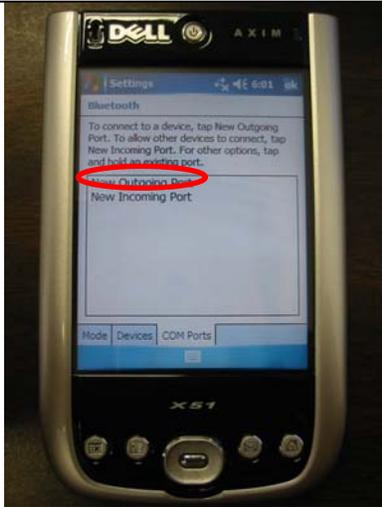


On the COM Ports tab, Select New Outgoing Port.

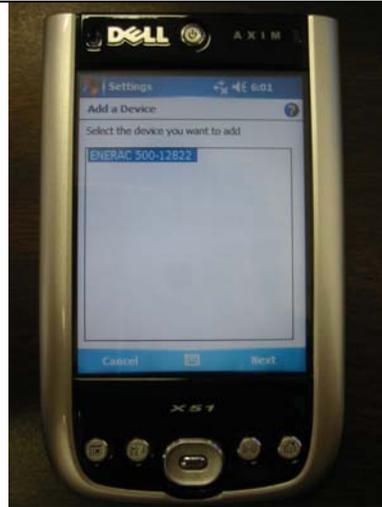

Select the ENERAC you wish to connect with.

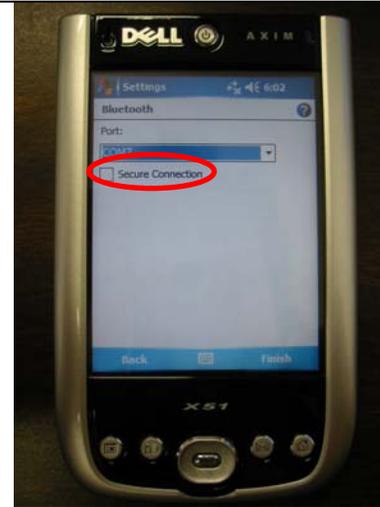

Unselect Secure Connection. Port must be COM7. Tap Finish.

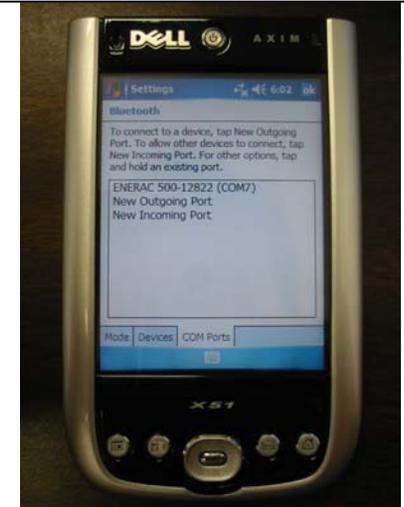


The Bluetooth Commport is now mapped to this particular Bluetooth ENERAC.

If you want to switch to another ENERAC, you must first delete any COM7 connection that appears here (Tap-and-Hold).

To Run Enercom
Tap Start, Programs, EnercomCE.



Enercom will now connect to your ENERAC analyzer.

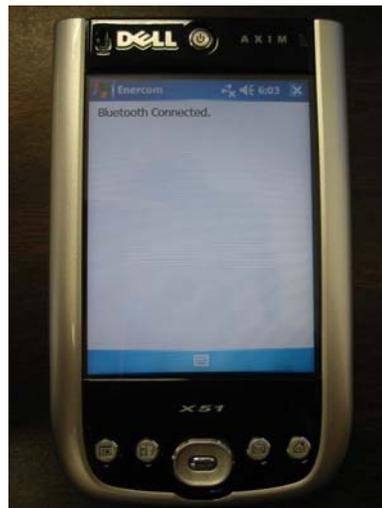

EnercomCE continues to run on your PocketPC even after you dismiss the program.

When the Bluetooth connection has been severed, due to:

- 1) Your PDA has powered down, or
- 2) Your ENERAC has been powered down, or
- 3) You have gone sufficiently out-of-range,

Reinstate the connection, by tapping Connection, Reconnect.

If Enercom stops responding, you can kill it by selecting, Start, Settings, System tab, Memory, Running Programs tab, Enercom, Stop, OK.

Resetting the PDA is also an effective means of starting fresh. Use the stylus to press the reset switch, located on the back side.